


# 2 Pre-Print Checks

## 2.1 Power up

- 1) Ensure the power cable is attached (see the picture below), and then switch on.

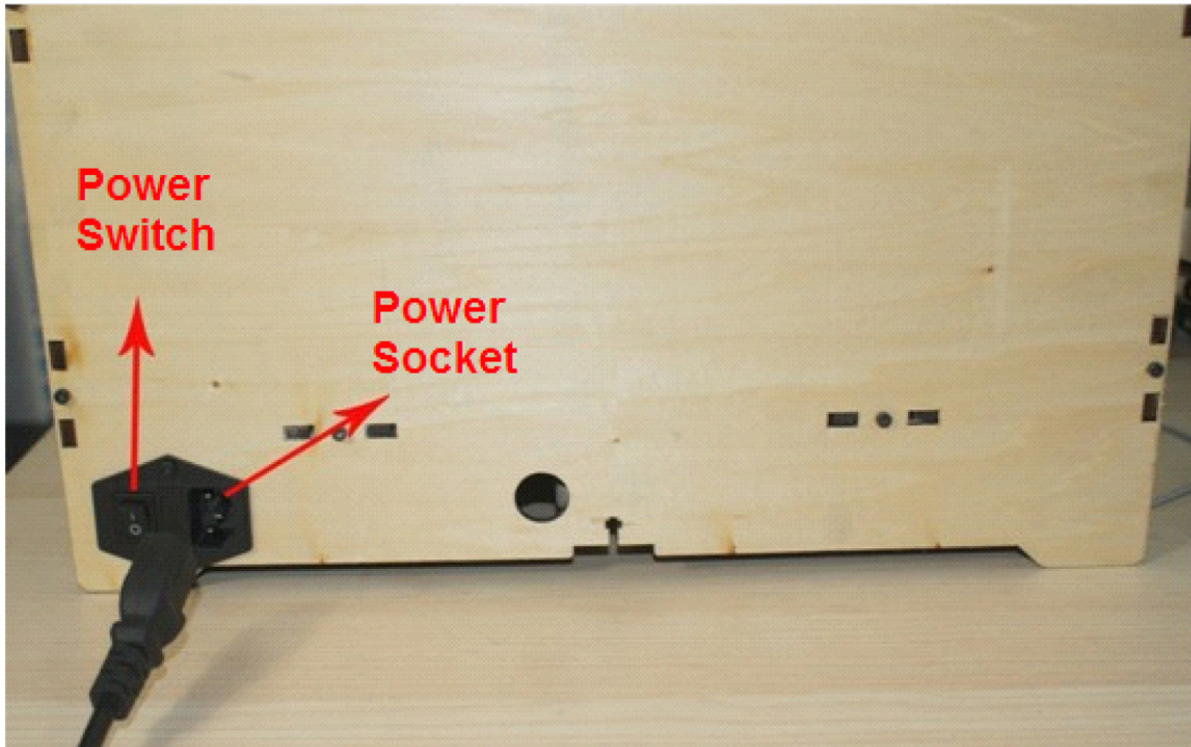

- 2) The LCD screen reads "Heater Error!", which can be fixed by heating up through software. Press any button at the right hand and you'll see the message changes on the LCD, which means the machine is ok.

By default the firmware assumes there is a Heated Bed. As there is not you get the error. Simply use the LCD screen menu and navigate as follows:  
Info and Settings -> General Settings -> Change "Heat Plate" to NO





## 2.2 Connect to computer

Make sure your computer is connected to your MBot with the supplied USB cable.

